

1.3

HP3V SERIES

Swash-plate Type
Axial Piston Variable Displacement Pump

Hengli swash-plate axial piston pump HP3V, the key parts of the pump are made of imported materials, quality strictly controlled, suitable for high-pressure hydraulic applications.

Apply to open hydraulic circuit

Displacements (cc/rev): 140
Rated pressure (bar): 350
Peaking pressure (bar): 400



Contents

Technical Data	02
Type introduction	03-05
Regulators introduction	06-11
Performance curves	12
Installation size	13
Setting of regulator and	
Max. displacement	25

Features

- ·Variable pump in swash-plate design for open circuit.
- · High continuous pressure.
- · Exceptional self-priming capability.
- · Available with American (SAE) and Japanese (JIS) mounting flanges and shafts.
- · Excellent reliability and long life.
- · High power to weight ratio.
- ·Variety of control options.
- · Optional through drive.
- · Quick control response.
- · Low pressure pulsation and low noise.
- Developed for engineering, mobile vehicles, Industrial and other industrial application.

Technical Data

Size		140
Displacement (cc/r	ev)	140
Dunnanuna	Rated pressure (bar)	350
Pressure	Peak pressure (bar)	400
Datation speed	Max for self-priming ^{*1} (rpm)	2150
Rotation speed	Max ^{*2} (rpm)	2500
Weight (Kg)		65
Quantity of oil to f	ill pump case (L)	1.4
Temperature Range (°C)		-20~95
Viscosity Range (mm²/s)		10-1000 ^{*3} (The best use of viscosity range 16~36 mm ² /s)

Permissible through drive torque							
Input shaft code	S3	S4	S5	D3	D4	К3	K8
Input torque rating (Nm)	552	925	1470	990	1470	430	1000

- 1. Steady state suction pressure should be 0 bar and above(at normal condition);
- 2. If suction pressure less than 0 bar, Boost pressure should be required;
- 3. In case of 200-1000mm²/s, please allow system to warm up before using machine.

Type introduction

HP3V	140	/	Α	V	1	0	R	C4	S3	М	_	L1/1	_	D	2	_	Т
1	2		3	4	(5)	6	7	8	9	10		11)		12	13)		14)

Product series

① Product series	HP3V
------------------	------

Displacement

п				1
	2	Displacement cc	/rev	140

Design series

(3)	Design series	A Series: HP3V 80-140	Α
0	Design series	71 301103.111 34 00 110	, ,

Seals

(A)	Seals FKM (Viton rubber: DIN ISO 1629) NBR (Nitrile rubble: DIN ISO 1629)	FKM (Viton rubber: DIN ISO 1629)	V
1 4		NBR (Nitrile rubble: DIN ISO 1629)	N

Hydraulic circuit

- 1				
	(5)	Hydraulic circuit	Open circuit	1

Through Drive

			140	Code
	Without through d	Without through drive		
	Standard configura	•	X2	
	Mounting Flange	Spline shaft		
	SAE A 82-2	SAE J744-16-4 9T 16/32DP	•	A1
	SAE A 82-2	SAE J744-19-4 11T 16/32DP	•	A2
(6)	SAE B 101-2	SAE J744-22-4 13T 16/32DP	•	B1
•		SAE J744-25-4 15T 16/32DP	•	B2
	SAE C 127-2	SAE J744-32-4 14T 12/24DP	•	C1
		SAE J744-38-4 17T 12/24DP	0	C2
	SAE C 127-4	SAE J744-32-4 14T 12/24DP	•	C3
	SAE C 121-4	SAE J744-38-4 17T 12/24DP	0	C4
	SAE D 152-4	SAE J744-44-4 13T 8/16DP	•	D1
	SAE D 152-4	DIN 5480 N50×2×24×9H	•	D2

Type introduction

Direction of Rotation

(7	Viewed on drive shaft	Clockwise	R	ĺ
1 4	viewed on drive shart	Counter-clockwise	L	ı

Input Mounting flanges

	Mounting flanges size	140	Code
8	SAE C 127-2/4 bolt (same flange)	•	C4
	SAE D 152-4	•	D4

Input Shaft

	Shaft size	140	Code
	SAE J744-32-4 14T 12/24DP	•	S3
	SAE J744-38-4 17T 12/24DP	•	S4
9	SAE J744-44-4 13T 8/16DP	•	S5
	DIN 5480 W50×2×24×9g	•	D4
	SAE J744-32-1 B7.94×44 straight shaft	•	К3
	DIN 6885 14×9×75 straight shaft	•	K8

Thread type of Flange Fixing Port

10 Thread type	Thread type	Metric threads	М
	Thread type	UNC threads	S

Control type

	Control ty	Control type		Code
	Cover plate, apply to constant displacement pump		•	N
		Only pressure control	•	DR
	D	+Load sensing with orifice R4	•	L0
	Pressure	+Load sensing without orifice R4	•	L1
	cut-off	Remotely operated+ Load sensing	•	P0
		+Electric proportional displacement	•	DR-EDO
11)		Pressure cut-off+ Load sensing	•	L1/1
		Remotely operated+ Pressure cut-off	•	P0/1
	Dawar	Electrically (negative control)	_	11/1 50
	Power	+Pressure cut-off+ Load sensing	•	L1/1-E0
	Control	Hydraulic control + Pressure cut-off	_	L1/1-H0
	(*)	+ Load sensing	•	L1/1-H0
		+Electric proportional displacement		DD/1 FDO
		+ Pressure cut-off	•	DR/1-EDO

Type introduction

Connector for solenoids

		140	Code
12	Without solenoid	•	Blank
	AMP Junior timer; 2 contact pin,		۸
	(without suppressor diode)		А
	Deutsch DT04-2P; 2 contact pin,		D
	(without suppressor diode)		U
	DIN EN175301-803; 3 contact pin,		Н
	(without suppressor diode)		П

Input Voltage

	Without solenoid	Blank
(13	12VDC	1
	24VDC	2

Application Conditions

(14)		140	Code
	Apply to excavator	•	Т
	Other mobile machinery,		Blank
	construction machinery, industrial application		DIATIK

Remark: ● = available; ○ = On request;

Code: L0 (L1)

Control Type: 1. Load sensing

Standard setting:15bar

Adjustment range:10bar-21bar

(It can be set to 38 bar at most, but it is not recommended to set it too high. If you need other settings, please consult our company.)

2. Pressure Cut-off

Standard setting:320bar

Adjustment range:21bar-320bar

L1 option(difference from L0)

With the L1 option, the bleed off orifice (R4) is plugged, when this option is applied, there must be another bleed off orifice in the external valving to prevent trapped pressure.





The load sensing control is a flow control option that operates as a function of the load pressure to regulate the pump displacement to match the actuator flow requirement. The load sensing control compares pressure before and after the sensing orifice and maintains the pressure drop across the orifice (differential pressure Δp) and with it the pump flow constant.

If the differential pressure Δp increases, then the pump displacement decreases, and if the differential pressure Δp decreases, then the pump displacement increases until the pressure drop across the sensing orifice in the valve is restored. Δp =Pp-Pa

Pump displacement is controlled to match the flow requirement as a function of the system differential pressure(load pressure vs delivery pressure). In addition, there is a pressure cut off function incorporated into the control.

The pressure cut off control keeps the pressure in a hydraulic system constant within its control range even under varying flow conditions. the variable pump only moves as much hydraulic fluid as is required by the actuators. If the operating pressure exceeds the set point set at the pressure control valve, the pump displacement is automatically swivelled back until the pressure deviation is corrected.

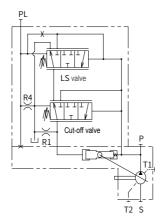

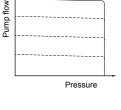

Code: P0

Control Type: 1. Load sensing


Standard setting: 15bar

Adjustment range: 10bar-21bar

(It can be set to 38 bar at most, but it is not recommended to set it too high. If you need other settings, please consult our company.)

2. Pressure Cut-off

Standard setting: 320bar Adjustment range: 21bar-320bar

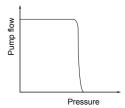


Function and Features: POI

P0 Pressure cut-off

The Pressure Cut-off regulator monitors outlet pressure once the pressure reaches the cut-off setting, the pump will return to minimum displacement.

Remote Control

The pump can be remotely controlled by connecting a relief valve to the PL port of the regulator. The pump can also be unload at a low pressure continue standby condition by using a solenoid valve.

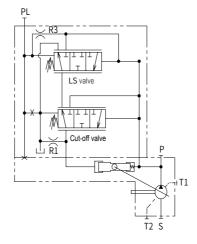

Code: □ /1

Control Type: 1. Load sensing

Standard setting: 15bar

Adjustment range: 10bar-21bar


(It can be set to 38 bar at most, but it is not recommended to set it too high. If you need other settings, please consult our company.)

2. Pressure Cut-off

Standard setting: 320 bar

Adjustment range: 21 bar-320 bar

3. Torque limiting

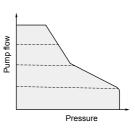


Function and Features:

_/1 Load Sense and Pressure Cut-off with Torque limiting

The L0/L1 control functions as previously noted. In response to a rise in delivery pressure the swash plate angle is decreased, restricting the input torque. This regulator prevents excessive load against the prime mover.

The torque limit control module is comprised of two springs that oppose the spool force by the system pressure. By turning an outer and inner spring adjustment screw, the appropriate input torque limit can be set.

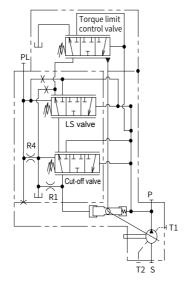

Pressure

Regulators introduction

Code: □ /1-E0

Control Type: 1. Load sensing

Standard setting:15bar

Adjustment range:10bar-21bar

(It can be set to 38 bar at most, but it is not recommended to set it too high. If you need other settings, please consult our company.)




Standard setting: 320bar

Adjustment range: 21bar-320bar

3. Port Pr pressure: 20bar~45bar

4. Electromagnet characters

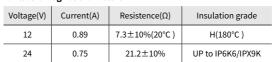


5. Connector (deutsch or Amp)

DEUTSCH: DT04-2P-E005 AMP: 174354-2 \ 173706-1

Function and Features:

_/1-E0 Load Sense and Pressure Cut-off with Torque limiting

The L0/L1 control functions as previously noted. It controls the input torque of the pump by changing different current, specific current is related to certain input torque, thus satisfy needs of different torque on excavator

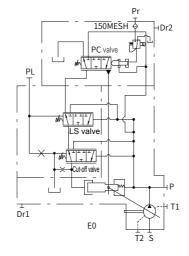

Code: □ /1-H0

Control Type: 1. Load sensing

Standard setting:15bar


Adjustment range:10bar-21bar

(It can be set to 38 bar at most, but it is not recommended to set it too high. If you need other settings, please consult our company.)

2. Pressure Cut-off

Standard setting: 320bar

Adjustment range: 21bar-320bar **3. Port Pr pressure**: 0bar~39bar

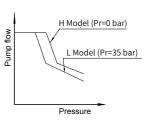


Function and Features:

_/1-H0 Load Sense and Pressure Cut-off with Total torque limiting

The L0/L1 control functions as previously noted.


It controls the input torque of the pump by changing different input pressure of port Pr, specific current is related to certain input torque, thus satisfy needs of different torque on excavator.

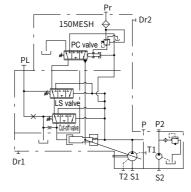

Code: *-EDO

Control Type:

The displacement of a variable displacement pump can be adjusted via an electro-hydraulic proportional adjustment. Control current range is ca. 300 mA to ca. 800 mA(24VDC) or ca.600mA to ca.1600mA(12VDC)

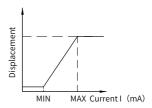


Function and Features: Electric proportional displacement

The main pump is supplied with servo pressure via port St as soon as the servo pump is started. The solenoid is usually deenergized during start of operation, i.e. the valve piston is pushed against its stop by the metering spring. This opens a passage to the larger area of the piston which returns the swash plate to its idle position. There is always pressure apparent at the smaller side of the control piston.


When the solenoid is energized with 300 mA (24VDC-solenoid) or 600 mA (12VDC-solenoid) it will push the valve piston against the spring force thereby connecting the larger area of the control piston with the tank. The control piston will move the swash plate against the metering spring in direction of increased delivery flow and loading the metering spring. This movement will stop as soon as the forces of the metering spring and the proportional solenoid are balanced thereby closing the prop. valve.


Both total delivery flow and total stoke of the solenoid are achieved when the solenoid is energized with 800 mA (24VDC-solenoid) or 1600 mA (12VDC-solenoid). Use electro-proportional displacement control valve and swash indicator can realize the close circuit control of the pump.

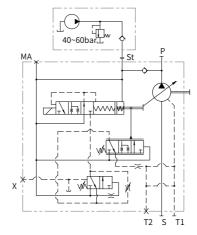

Performance curves

HP3V 140 Performance curves

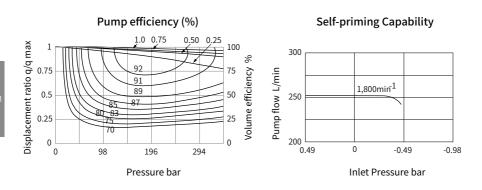

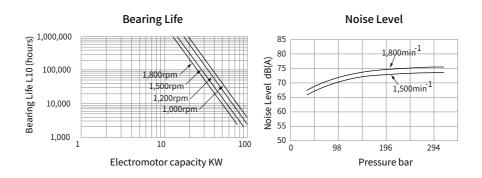


- 1.Values shown in above figures, excluding those for bearing life, are not guaranteed values, but mean level. Bearing life is basic rated life of calculation (reliability 90%);
- 2.Noise level of the pump is tested under silent circumstance (tested behind the pump about 1 meter);
- 3. Under actual working conditions, noise level of the pump may be higher than that in the curves.

HP3V140 installation size

HP3V140 With Cut-off/Load Sense Control with Torque limit (Clockwise Rotation)

For the CCW pump just reverse the inlet and outlet port.

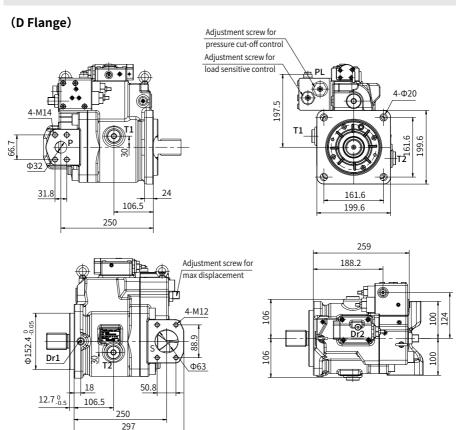



HP3V140 installation size


HP3V140 With Cut-off/Load Sense Control with Torque limit (Clockwise Rotation)


For the CCW pump just reverse the inlet and outlet port.

(C Flange)

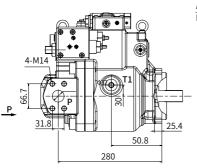

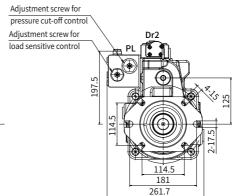

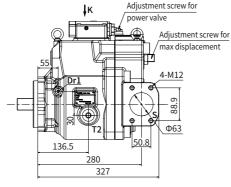


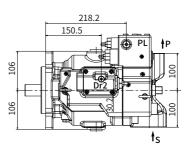


Port Details

	Port Name	Port Size and Description		Tightening Torque (N·m)		
Р	Working port	1-1/4" SAE J518C	M (metric)	M14×2 (depth 19mm)	98	
	Code 62 (5000psi)	Working port	Code 62 (5000psi)	S (UNC)	1/2-13UNC-2B (depth 19mm)	36
		2-1/2" SAE J518C	M (metric)	M12×1.75 (depth 22mm)	00	
3		Code 61 (2500psi)	S (UNC)	1/2-13UNC-2B (depth 22mm)	98	
T1、T2	Case drain Port	SAE J1926/1 (1-1/16-12UNF-2B) (depth 23 mm)		167		
PL	LS Control Port	SAE J1926/1 (7/16-20UNF-2B) (depth 17 mm)		12		
Dr1	Air Bleed Port	SAE J1926/1 (7/16-20UNF-2	SAE J1926/1 (7/16-20UNF-2B) (depth 14 mm)		12	
Dr2	Air Bleed Port	M10×1 (depth 8.5mm)		12		
Pr	Electronic control or Hydraulic control pilot	SAE J1926/1 (7/16-20UNF-2B) depth 11.5mm		12		


HP3V140 With Electrical Control for Torque limit

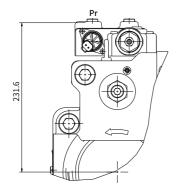


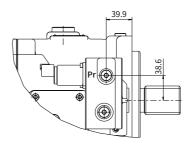



HP3V140 Electric proportional displacement pump installation size

(Please refer to "Page 11/32" for hydraulic Circuit.)

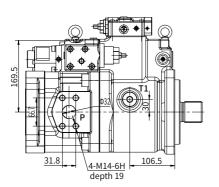

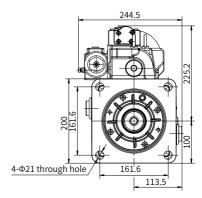

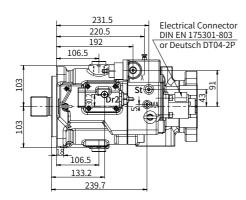

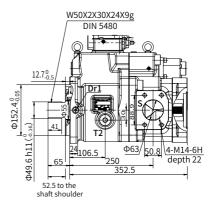


Port Details


	Port Name	Port Size and Description		Tightening Torque (N·m)
P Delivery nort '		1-1/4" SAE J518C Code 62 (5000psi)	M14×2 (depth 19mm)	98
S	Suction Port	2-1/2" SAE J518C Code 61 (2500psi)	M12×1.75 (depth 22mm)	98
T1、T2	Drain port	DIN 3852 M26×1.5 (depth	16mm)	120
St	Pilot port	DIN 3852 M14×1.5 (depth	n 12mm)	35
Dr1	Air Bleed Port	SAE J1926/1 (7/16-20UNF-2B)		12
Dr2	Air Bleed Port	M10×1 (depth 8.5mm) ISO6149-1		12
MA	pressure port	DIN 3852 M12×1.5 (depth 12mm)		25

0


Installation size


HP3V140 Mounting Flange

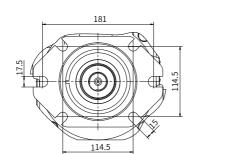

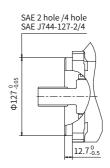


SAE "C4" type 127-2/4

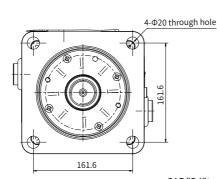

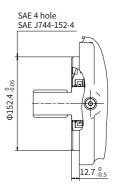


SAE "D4"type 152-4


HP3V140 Input Shaft type

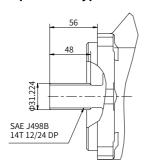


"S3" type spline shaft

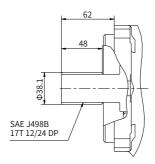


"S4" type spline shaft

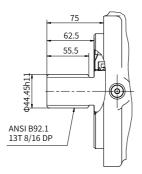


"S5" type spline shaft

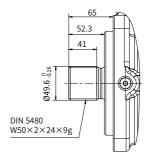

"D4" type spline shaft

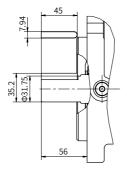


"K3" type straight shaft

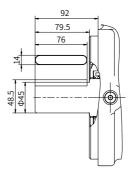

"K8" type straight shaft

X Type

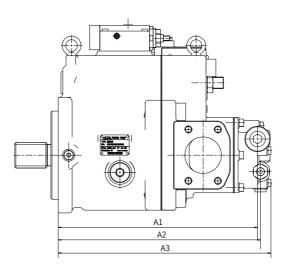


Gear pump information


	Rated pressure	Peak pressure	Theoretical displacement
6cc/rev	39bar	70bar	6cc/rev
10cc/rev	39bar	50bar	10cc/rev

	140
A1	344
A2	349
A3	367

A1 Type


SAE A 82-2 + SAE J744-16-4 9T 16/32DP

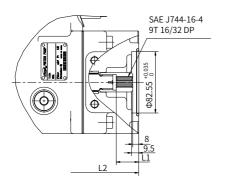


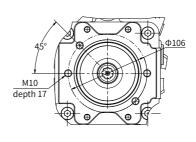

Disp.(cc/rev)	140 (flange C)	140 (flange D)
L1	31	31
L2	337.5	307.5

A2 Type SAE A 82-2 + SAE J744-19-4 11T 16/32DP

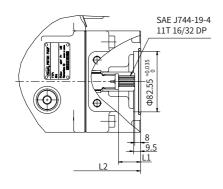


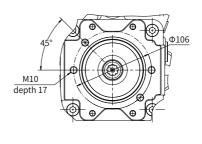

Disp.(cc/rev)	140 (flange C)	140 (flange D)
L1	31	31
L2	337.5	307.5


B1 Type

SAE B 101 -2 + SAE J744-22-4 13T 16/32DP

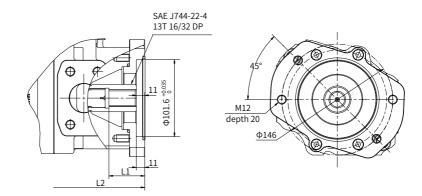

Disp.(cc/rev)	140 (flange C)	140 (flange D)	
L1 49.5		49.5	
L2	362.5	332.5	


B2 Type SAE B 101 -2 + SAE J744-25-4 15T 16/32DP

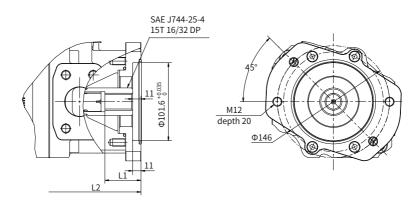

Disp.(cc/rev) 140 (flange C)		140 (flange D)
L1	49.5	49.5
L2	362.5	332.5


C1 Type

SAE C 127-2 + SAE J744-32-4 14T 12/24DP

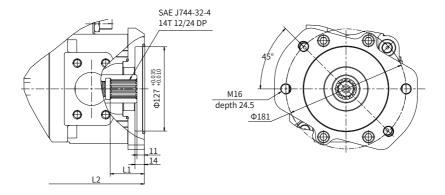

Disp.(cc/rev) 140 (flange C)		140 (flange D)
L1	56.5	56.5
L2	367.5	337.5


C2 Type SAE C 127-2 + SAE J744-38-4 17T 12/24DP

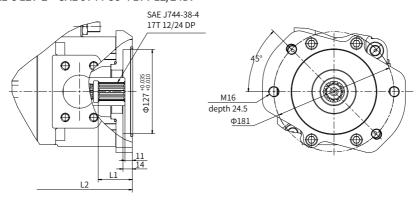


Disp.(cc/rev) 140 (flange C) 1		140 (flange D)
L1	62	62
L2	373	343

C3 Type


SAE C 127-4+SAE J744-32-4 14T 12/24DP

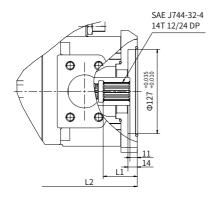


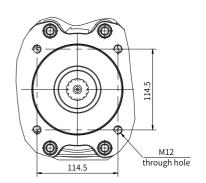

Disp.(cc/rev) 140 (flange C)		140 (flange D)
L1	56.5	56.5
L2	367.5	337.5

C4 Type SAE C 127-4+SAE J744-38-4 17T 12/24DP

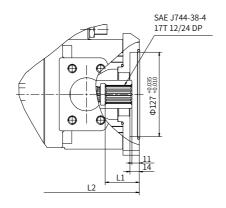


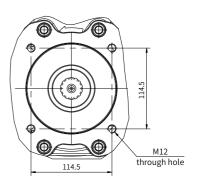


Disp.(cc/rev)	Disp.(cc/rev) 140 (flange C)	
L1	62	62
L2	373	343

D1 Type


SAE D 152-4 + SAE J744-44-4 13T 8/16DP

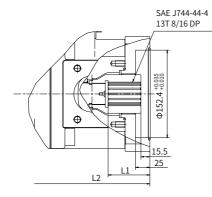

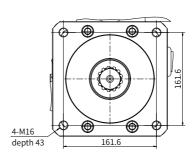

Disp.(cc/rev)	Disp.(cc/rev) 140 (flange C)	
L1 72.5		72.5
L2	380.5	350.5


D2 Type SAE D 152-4+DIN 5480 N50×2×24×9H

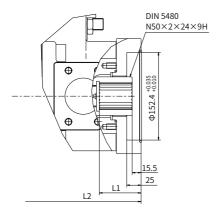

Disp.(cc/rev)	Disp.(cc/rev) 140 (flange C)	
L1	72.5	72.5
L2	380.5	350.5

Setting of regulator and Max. displacement


Setting control valve

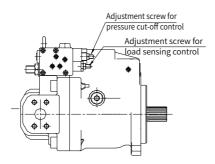

size	Approx. pressure change per rotate screw(bar)	
Size	Pressure cut-off valve	LS valve
140	92	14

Setting pressure at delivery: Pressure control: 320bar Differential pressure: 15bar

Setting of Max. displacement

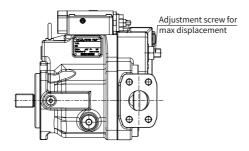

size	Approx. displacement change per revolution of screw (cc/rev)	Min. setting of max. displacement (cc/rev)	Setting displacement
140	12	70	at delivery is maximum

China

+86 400 101 8889

America +01 630 995 3674

Germany

+49 (30) 72088-0

| **Japan** | +81 03 6809 1696



© This brochure can be reproduced, edited, reproduced or transmitted electronically without the authorization of Hengli Hydraulic Company. Due to the continuous development of the product, the information in this brochure is not specific to the specific conditions or applicability of the industry, thus, Hengli does not take any responsibility for any incomplete or inaccurate description.